


Pill Box Timer

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack Pill Box Timer combines several unique features to help you remember when to take prescribed medications. You can set its countdown timer so an alarm sounds when your next dosage is due. Its divided storage compartment provides space to keep two types of pills. A carrying cord is supplied for easy handling.

REPLACING THE BATTERY

The pillbox timer comes with one CR2032 button-cell battery, which is pre-installed for power. Before using your timer, grasp the battery insulation strip and pull it out of the battery compartment. The timer beeps and all segments of the LCD briefly light. The clock and timer reset immediately, then **am 12:00** appears on the display.

If  appears, follow these steps to replace the battery.

Note: All settings are lost when the battery is replaced.

Caution: Only use a fresh battery of the required size and recommended type.

1. Use a coin to turn the battery compartment cover counterclockwise, then remove the cover.
2. Place the battery in the compartment with its + polarity symbol facing up.
3. Replace the cover.

Warnings:

 

- Dispose of old batteries promptly and properly. Do not burn or bury them.
- Keep button-cell batteries away from children. Swallowing a button-cell battery can be fatal.

Caution: If you do not plan to use the timer for a month or more, remove the battery. Batteries can leak chemicals that can destroy electronic parts.

OPERATION



Note: A beep sounds when you press any button.

Setting the Time

1. Hold down **MODE** until **12hr** appears. Release **MODE**. **12hr** flashes. Repeatedly press  to alternate between the 12- and 24-hour format.
2. Press **MODE**. The hour digits flash.
3. Repeatedly press or hold down  to set the current hour.





Note: **am** appears for an AM hour and **pm** appears for a PM hour only if you set the clock to the 12-hour format.

4. Press **MODE**. The minute digits flash.

5. Repeatedly press or hold down  to set the current minutes.
6. Press **MODE**. The second digits flash.
7. Press  to reset the second digits to **00**.
8. Press **MODE** to confirm the settings and return to the time display.

Note: If you do not press a button for about 1 minute during the time setting process, the timer exits setup, only retaining settings entered prior to timing out. For example, if you are changing the time from 12:34 to 6:10 and pause one minute after entering 6, the timer reverts to 6:35.

Using the Countdown Timer

1. Press **MODE** to view the countdown timer display. The last set time and  appear.
2. Hold down **MODE** for about 2 seconds to reset the display to **0:00**. The hour digit flashes.
3. Repeatedly press or hold down  to set the number of hours you want the timer to count down. For example, if your next dose is due in six hours, set the hour to **6**.
4. Press **MODE**. The minute digits flash.
5. Repeatedly press or hold down  to set the number of minutes you want the timer to count down.
6. Press **MODE**. The timer is set.
 - The maximum countdown you can set is 29 hours, 59 minutes.
 - If you do not press a button for about 1 minute during timer setting, the current timer setting reappears.
7. Press **START/STOP** to start the countdown.
 - While the countdown is running,  flashes in the time display mode.
 - To pause the countdown, press **START/STOP**. Press it again to resume the countdown.
 - To reset the timer to its originally set time while the countdown is running, hold down **START/STOP** for about 2 seconds. The originally set time appears. To use the same countdown time again, press **START/STOP**. The timer starts counting down.
 - When the countdown timer reaches **0:00**, the alarm sounds for about 1 minute, and continues to sound a beep every minute. To silence the alarm sooner, press any button, the original countdown timer appears on the display. Press **MODE** to return to the time display.

Using the Pillbox

To open the pill box, press the storage compartment door in the direction of the arrow. To close, push the door back until it clicks.

CARE

Keep the timer dry; if it gets wet, wipe it dry immediately. Use and store the timer only in normal temperature environments. Handle the timer carefully; do not drop it. Keep the timer away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the timer's internal components can cause a malfunction and might invalidate its warranty. If your timer is not performing as it should, take it to your local RadioShack store for assistance.

SPECIFICATIONS

Operating Temperature	23 to 122°F (–5 to 50°C)
Alarm Frequency	1KHz
Power Source	One CR2032 button cell battery
Battery Life.....	Approximately 1 year
Dimensions (HWD)	3 ⁷ / ₁₆ × 2 ³ / ₁₆ × 5/ ₈ Inches (88 × 56 × 16mm)
Weight (without battery)	1.3 oz (37.5 g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99